

# LAUSON

## INSTRUCTION MANUAL




**Foldable travel iron**

**AIR203**

**Please read this manual carefully before use, and keep it for future reference.**

## GENERAL DESCRIPTION

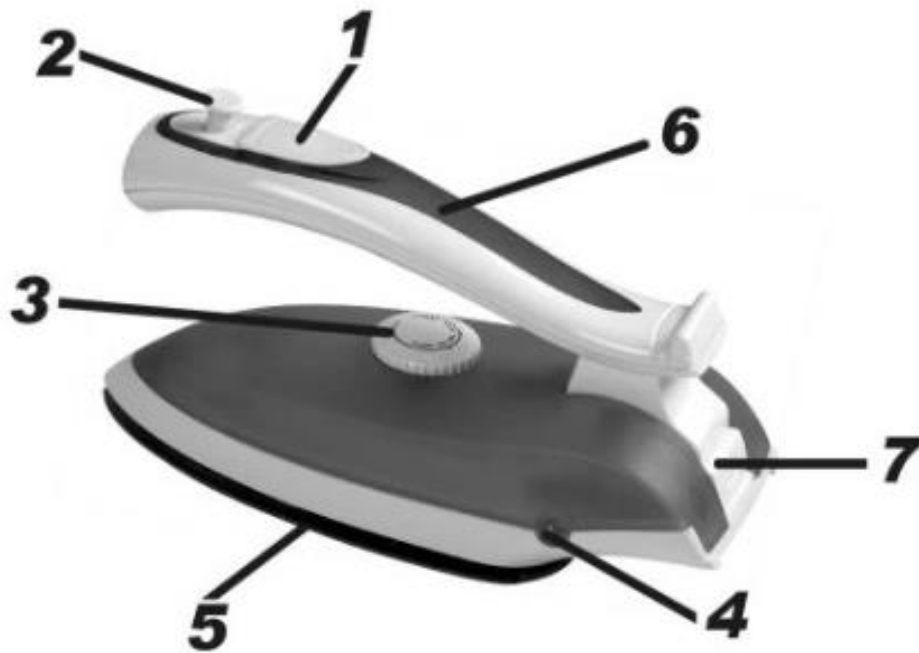

## Foldable Handle



1. Fill opening
2. Steam jet button
3. Temperature dial
4. Temperature indicator
5. Soleplate
6. Water tank
7. Handle release button

## IMPORTANT SAFETY INSTRUCTIONS

People with physical, sensorial or physical disabilities and/or lack of experience or knowledge, should use the appliance only under the supervision of a responsible adult. Close supervision is necessary to prevent children from using the appliance as a toy.

- Check that your main voltage corresponds to that stated on the appliance.
- From time to time, check the appliance for damages. If it is damaged it should be repaired by a competent qualified electrician (\*). Should the cord be damaged, it must be replaced by a competent qualified electrician (\*).
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- Never immerse the appliance in water or any other liquid. Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Before cleaning, always unplug the appliance from the power supply.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories that are not recommended by the producer. They could cause danger to the user and risk to damage the appliance.
- Never move the appliance by pulling the cord. Do not wind the cord around the appliance and do not bend it.
- The temperature of the accessible surfaces may be very high when the appliance is in use. Never touch these surfaces, always use the handle.
- Make sure the cord does not come into contact with the hot parts of the appliance.
- Before using the appliance for the first time, remove all labels and remainders from the soleplate and carefully wipe it dry.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Keep the appliance and its cord out of reach of children less than 8 years of age
- This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
- Before using the appliance for the first time, remove all labels and remainders from the soleplate and carefully wipe it dry.
- Always let the appliance cool down before cleaning, storing or filling it (model with spray and/or steam).
- If the water is hard, fill half tank with tap water and rest with distilled water.
- Never leave the appliance in horizontal position, but preferably in vertical position.
- Make sure its soleplate does not touch inflammable materials (e.g. plastic, textile) during use.
- Always unplug the iron when not in use.
- The iron shall be used and placed on a stable level surface.
- Do not use the iron if it has fallen, if it shows any visible signs of damage or if it leaks.
- THE IRON IS NOT DESIGNED FOR CONTINUOUS USE OF MORE THAN ONE HOUR.

## HOW TO USE:

Make sure you have removed all packing material.

- Ensure that the selected tension on the voltage selector coincides with the tension of the mains.
- To eliminate the smell given off by the appliance when used for the first time, it is recommended have it on at full power for 2 hours in a well-ventilated room.
- Prepare the appliance according to the function you wish to use.

## FILLING WITH WATER:

It is essential to have filled the deposit with water to be able to work with steam.

- Open fill opening cap.
- Fill the deposit taking care to observe the MAX
- Close fill opening cap.

## USE PURPOSE:

- Fully release the power cable before use
- Plug the appliance into the main power supply.
- For safety, put the iron on some support base or a stable and flat surface
- Follow the specifications of your clothes label, choose the set temperature. Slide the thermostat dial to the desired temperature position. Do not use temperatures higher than those indicated on the garments to be treated
- The pilot light comes on
  - Temperature for synthetic fibres (Polyester, Nylon...)
  - Temperature for silk and wool.
  - Temperature for cotton. (Minimum temperature for steam ironing)
    - Max Temperature for linen
- If garment has various kinds of fibres, select the temperature for the fibre that requires the lowest temperature. (For example, select the temperature for polyester for an article made out of 60% polyester and 40% cotton

Note: Lauson iron will only produce steam in the 'Cotton (Cotton) / (Linen) setting.

## DRY IRONING:

The appliance has an option to dry ironing (without steam). To use this option turns on only the iron temperature dial.

### STEAM IRONING:

It is possible to iron with steam whenever the deposit is filled with water and the adequate temperature is selected.

## FOLDABLE HANDLE

By pressing the button (7) the handle is folded for an easy storage

## STEAMSHOOT:

- This function proportions extra steam for eliminating wrinkles.
- Press the steam blast button (2). Wait a few seconds until vapor penetrates the fibers of the garment before pushing the button again. For optimum steam quality, do not apply more than three successive blasts.
- The steam blast button might require to be pressed repeatedly to release the first shot.

## ONCE YOU HAVE FINISHED USING THE APPLIANCE:

- Select the minimum position (MIN) using the thermostat control.
- Unplug the appliance from the mains.
- Remove the water from the inside of the appliance.
- Clean the appliance

## PRACTICAL RECOMMENDATIONS:

- Classify the garments into groups by ironing temperature. The appliance heats up more quickly than it cools down, therefore, to avoid accidents, minimise energy consumption and optimise time, it is advisable to start off ironing items that require lower temperatures and progress to those that need higher temperatures.
- Pure wool fabrics (100%) can be ironed with the iron set to steam. Select a high steam temperature and place a cotton cloth between the iron's metal surface and the garment.

## CLEANING

- Disconnect the appliance from the mains and allow it to cool before undertaking any cleaning task.
- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Never submerge the appliance in water or any other liquid or place it under running water.

## HOW TO DEAL WITH LIME SCALE INCRUSTATIONS:

For the appliance to work correctly it should be kept free of limescale or magnesium incrustations caused by the use of hard water:

- To avoid this kind of problem it is advisable to use distilled water.
- To prevent this kind of problem, we recommend the use of water with low lime or magnesium mineralisation.
- However, if it is not possible to use the kind of water recommended above, you should periodically remove the limescale from the appliance: Every 6 weeks if the water is "very hard".
  - Every 12 weeks if the water is "hard"
- To do so, we recommend the use of the specific product for this kind of appliance, which can be found in specialised shops and authorised technical services.
- A specific anti-lime scale product should be used on this kind of product.
- Homemade solutions are not recommended in the decaling of this appliance, such as the use of vinegar

## ANOMALIES AND REPAIR

Take the appliance to an authorised technical support service if product is damaged or other problems arise. Do not attempt to disassemble or repair the appliance yourself, as this may be dangerous.

## QUALIFIED ELECTRICIAN TECHNICIAN:

After the approval of the sales department of the producer or importer or of any person who is qualified, approved and competent to carry out this type of repairs in order to avoid any danger. In any case, you must return the device to this technician

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
<b>The iron is plugged in, but the soleplate is cold.</b>	There is a connection problem.	Check whether the plug is inserted in the wall socket.
	The temperature setting has been set to off.	Set the temperature setting to the required temperature.
<b>The iron does not produce steam.</b>	There is not enough water in the tank.	Refill the tank.
	The temperature setting is not set to a steam position.	Rotate the temperature dial to the required setting.
<b>Water leaks from the soleplate.</b>	The temperature is not hot enough.	Rotate the temperature dial to the required setting for steam and wait until the light goes out.
<b>Flakes and impurities come out from the soleplate during ironing.</b>	The water used is hard.	Fill the tank with 50% tap water and 50% distilled water. Rotate the temperature dial to the required setting for steam and wait until the light goes out. Hold the iron over a sink and press the extra steam button a few times. This should flush the flakes out of the iron. Turn off and allow cooling, and then wiping the plate several times with a damp cloth to remove any residues.